



How to modify the fasteners on your Anti-Crusher (A-E)

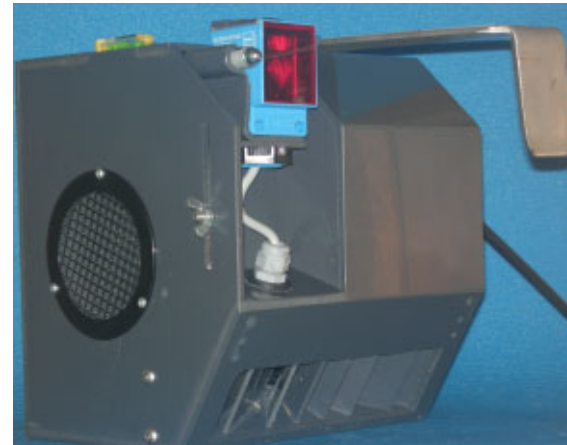

Bodyguard
Anti-Crusher
(after modifications)

STEP 1.

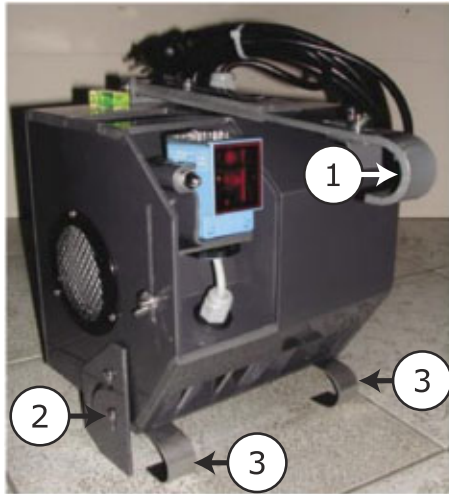

Bodyguard Anti-Crusher
(before)

Remove the parts which are not necessary any more.

- Telescopic arm (1)
- Swiveling locks (2)
- Basic hooks (3)

Put back the screws in the holes.


STEP 2.



The new male "L-Bar" (4) part must be fixed above the Anti-Crusher.

You will have 4 holes to drill (5) to fix the "L-Bar".

STEP 3.

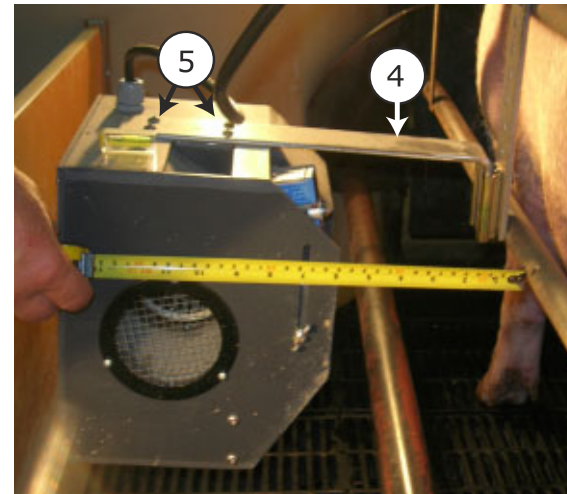

Place the "L-Bar" on the top right in the center of the Anti-Crusher. Press the "L-Bar" on the block of fastener of the telescopic arm which you have just removed (5" of the front of the apparatus).

Mark the exact place of the holes to be made with a felt-tip pen. Open the back cover and visualize where you will drill. Use a bit of 1/4" and 4 bolts of 1/4x20x3/4" to screw the "L-Bar".

The "L-Bar" of 3/16" thickness, made of stainless steel, is folded and cut especially for the Anti-Crusher. It is also made to be fixed in the female fastener placed on the cage.

